
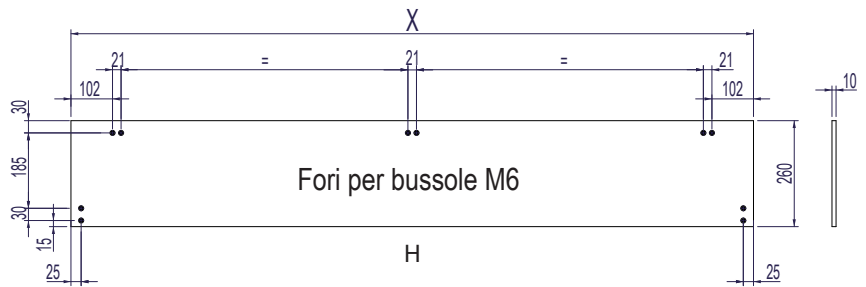



Istruzioni montaggio antenna su ribalta verticale Aladino con divano.

Lista ferramenta

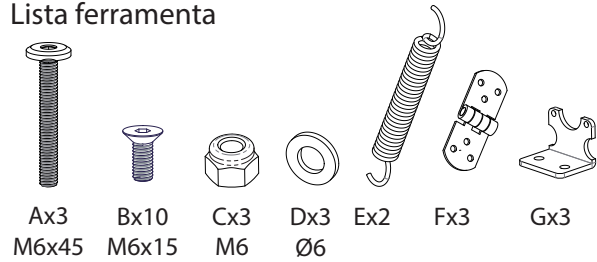


Istruzioni di montaggio


Step 01

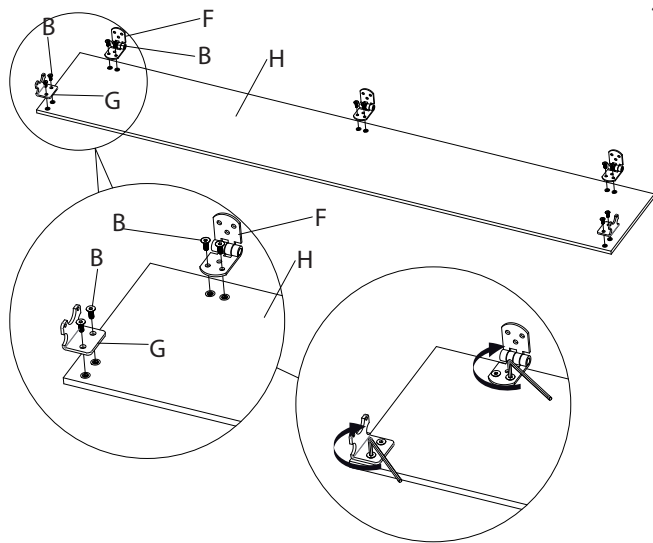


Step 02

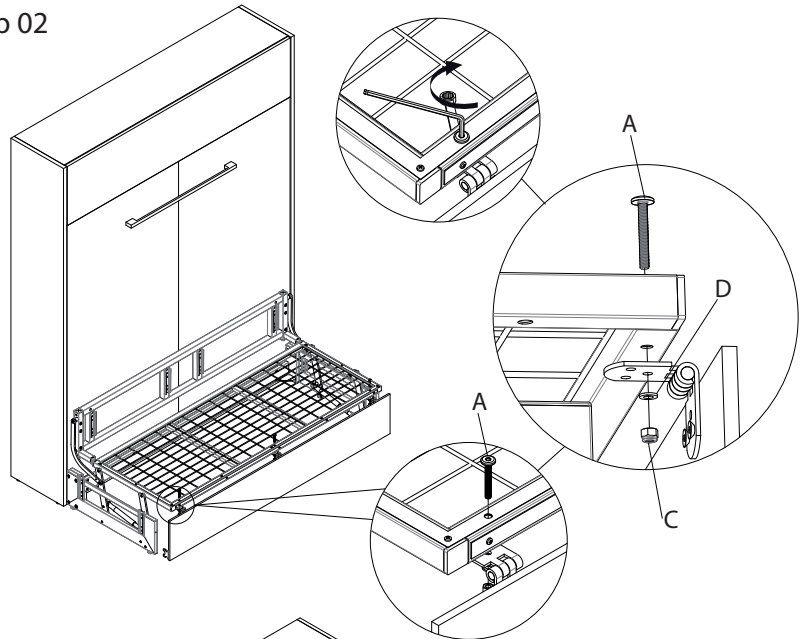

Step 03

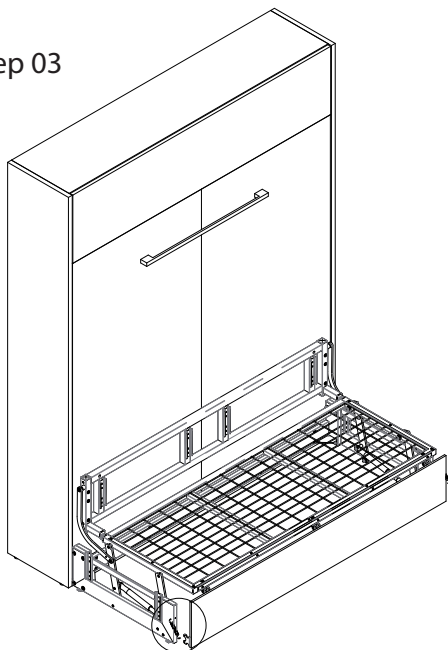


Step 04

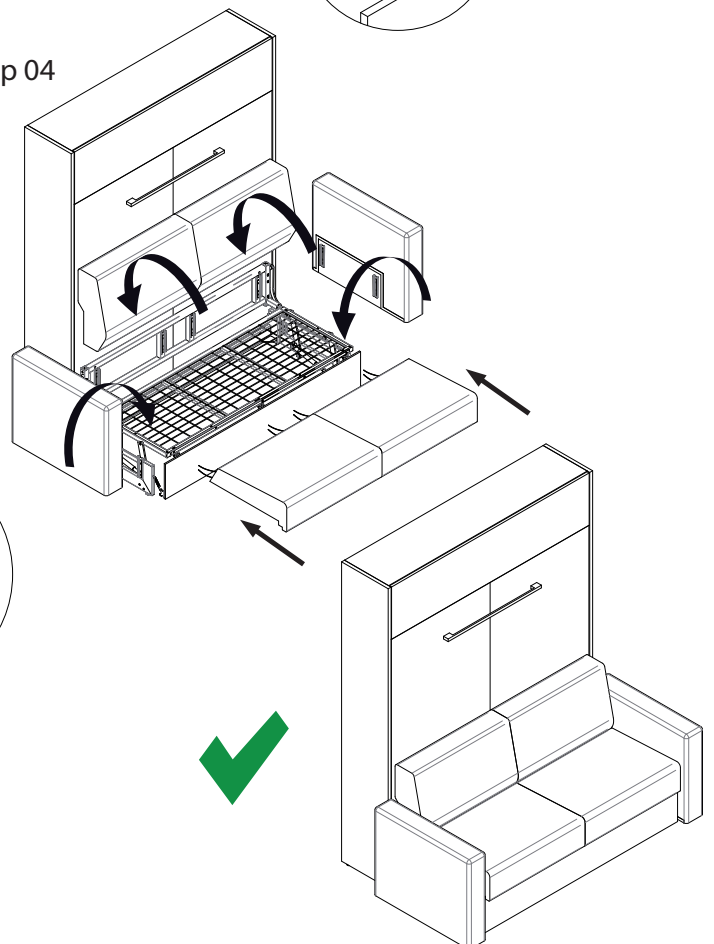


Misura della rete (mm)	1420x2000	1590x2000	1620x2000	1820x2000
X (mm)	1475	1645	1675	1875

Scheda tecnica del modello a ribalta verticale Aladino con divano.

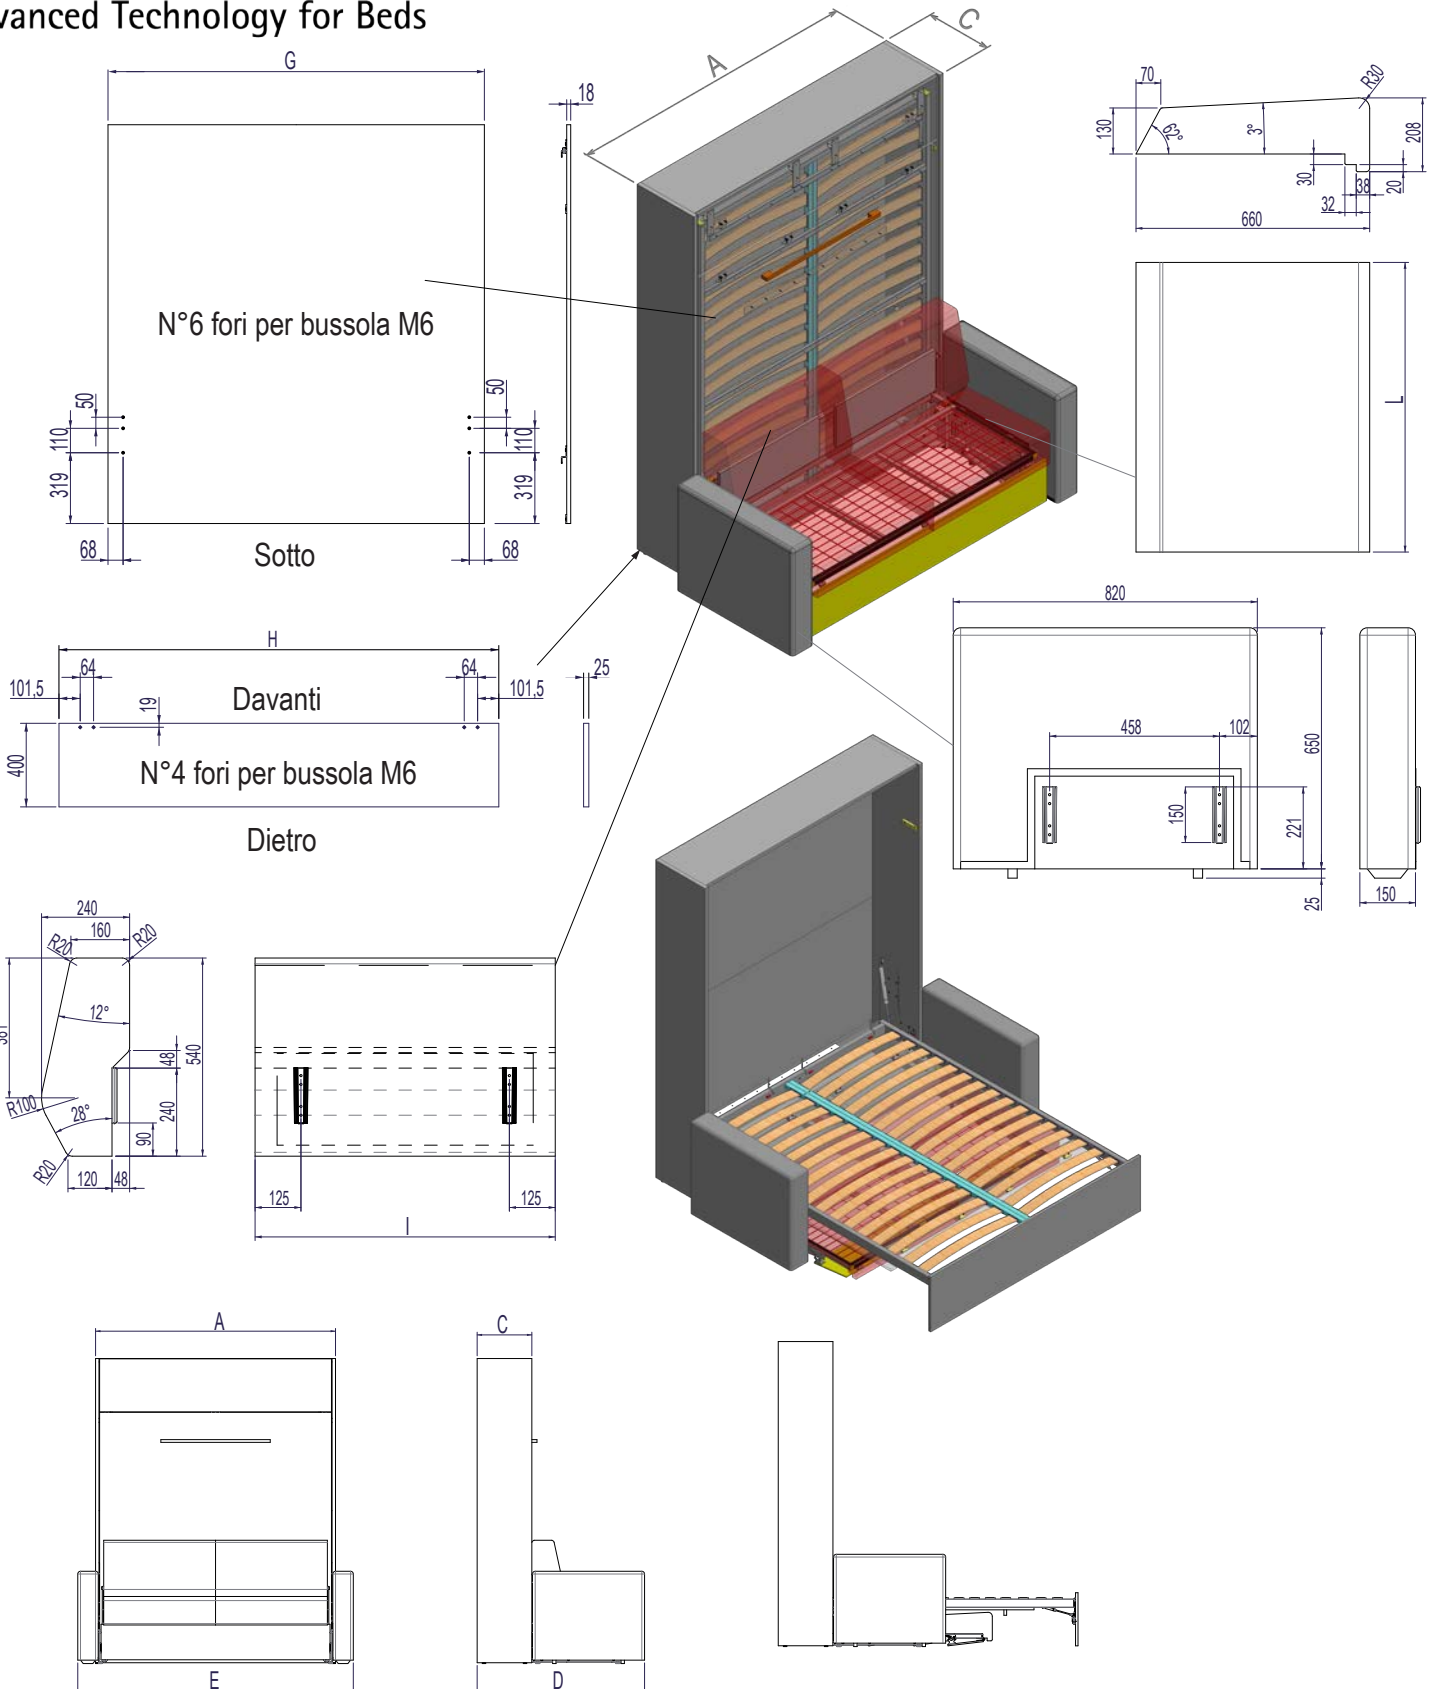

Misure della rete (mm)	A (mm)	C (mm)	D (mm)	E (mm)	G (mm)	H (mm)	I (mm)	L (mm)
1220	1355	400	1225	1615	1296	1305	618	618
1420	1555	400	1225	1815	1466	1505	718	718
1620	1755	400	1225	2015	1696	1705	818	818
1820	1955	400	1225	2215	1896	1905	918	918
2000	2135	400	1225	2395	2076	2085	1008	1008
2020	2155	400	1225	2415	2096	2105	1018	1018

Datasheet for hideaway bed Aladino with sofa structure.

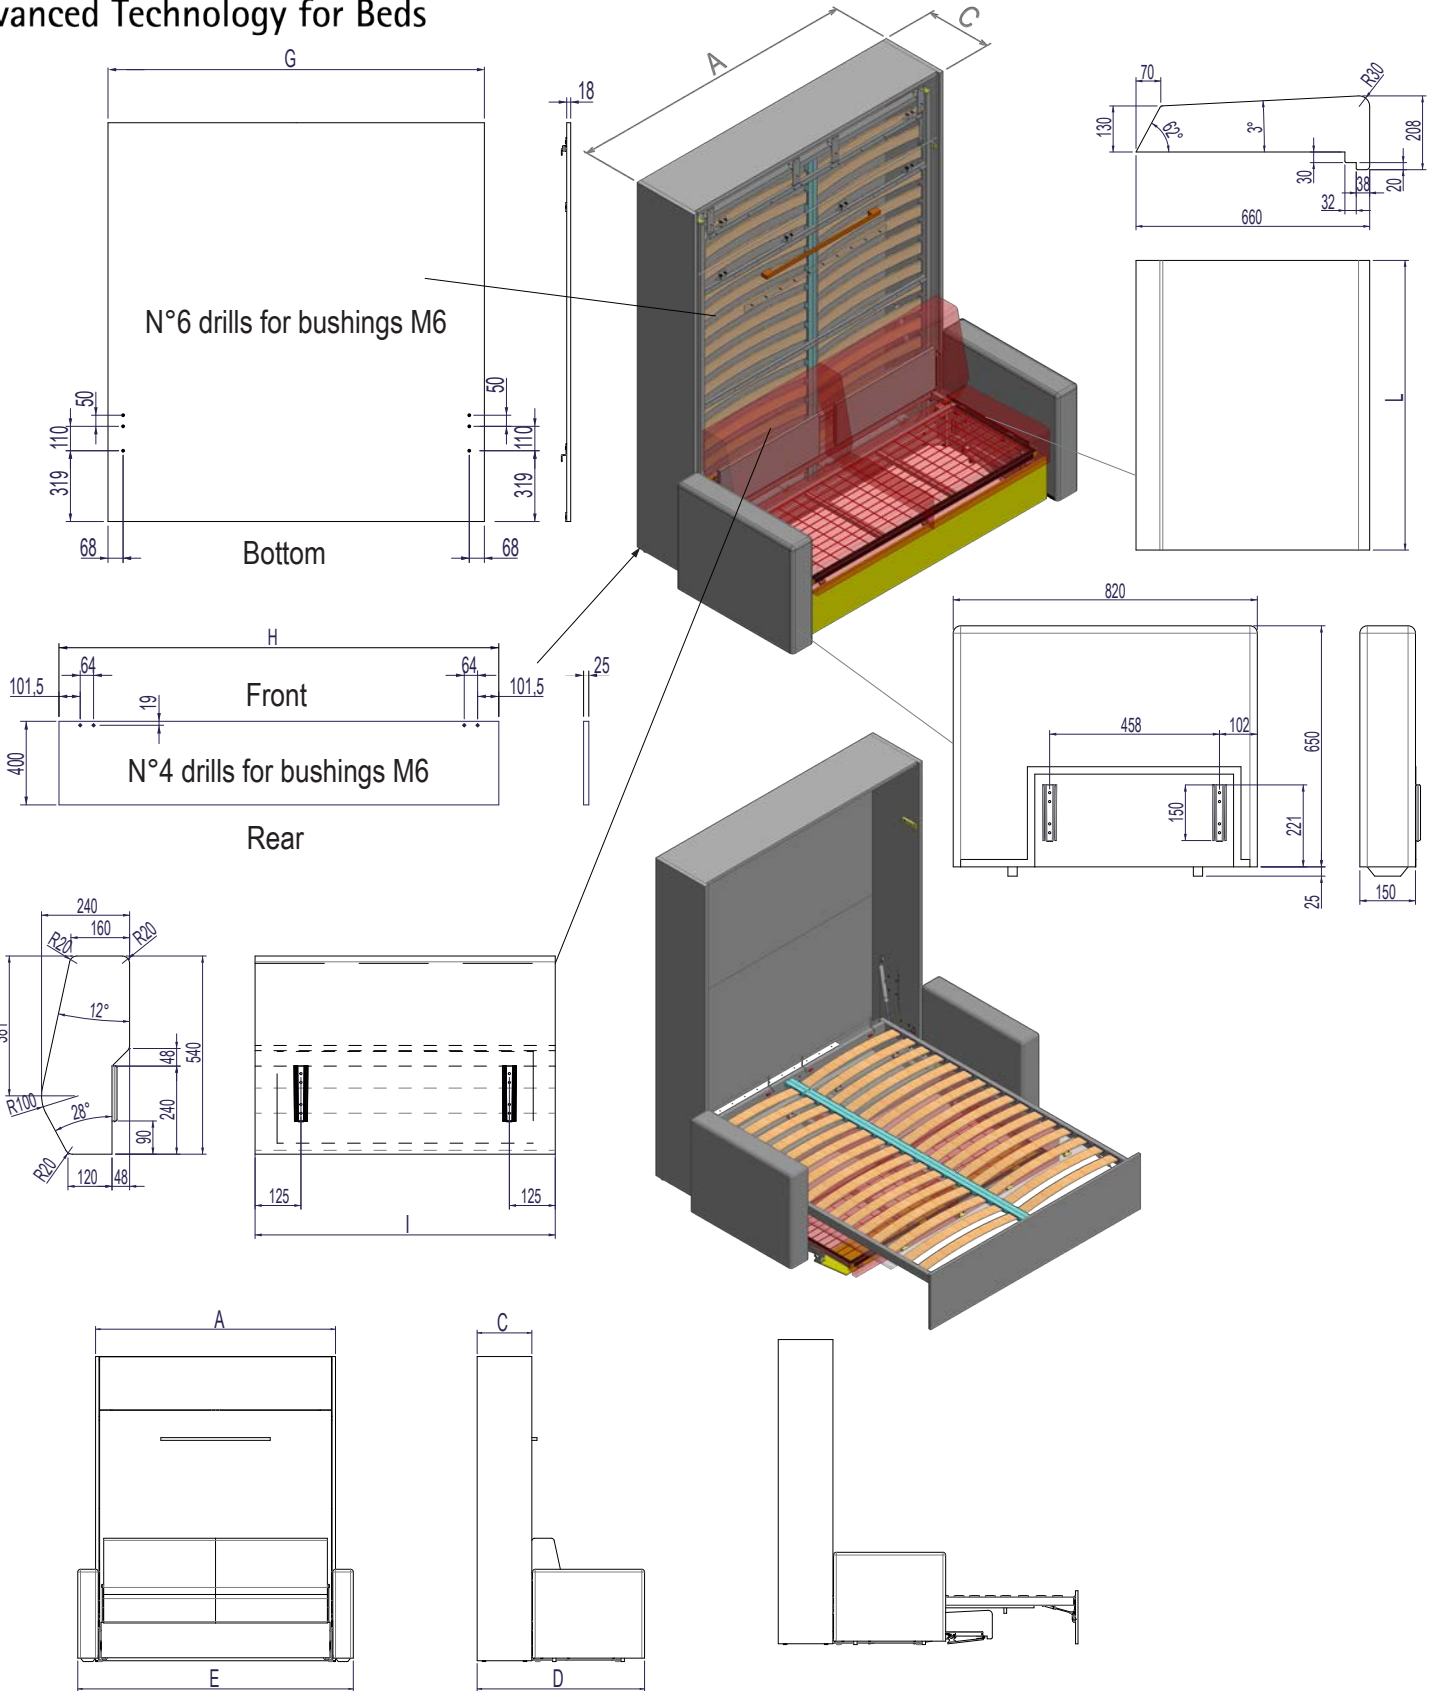

Bedspring size (mm)	A (mm)	C (mm)	D (mm)	E (mm)	G (mm)	H (mm)	I (mm)	L (mm)
1220	1355	400	1225	1615	1296	1305	618	618
1420	1555	400	1225	1815	1466	1505	718	718
1620	1755	400	1225	2015	1696	1705	818	818
1820	1955	400	1225	2215	1896	1905	918	918
2000	2135	400	1225	2395	2076	2085	1008	1008
2020	2155	400	1225	2415	2096	2105	1018	1018